

Instructions


1. Spread out riveted head and foot bars to form a 90° angle with long side bars.



2. Install leg supports to frame with 1/4" x 1/2" bolts. Then insert rollers or glides into leg supports. Note that you cannot install leg supports with plastic glides.



3. Join both halves of head support, and both halves of foot support, according to box spring format, using bolts & nuts assembly system. Use 5/16" x 3/4" bolts.

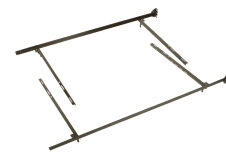

4. Install centre support from head to toe if included, using 5/16 X 3/4 carriage bolts, washers and nuts to attach it, without tightening.

5. Install box spring on bed frame. Make final width adjustment, and tighten bolts.



6. Install angle protectors at extremities.



7. If installing a headboard, use 1/4" x 2 1/2" screws to attach frame to headboard.